


※フローア-はC30A型です。

※直/調切替回路

- ・SC上下 1・12
- ・袖WP上下 1・2
- ・後C 1

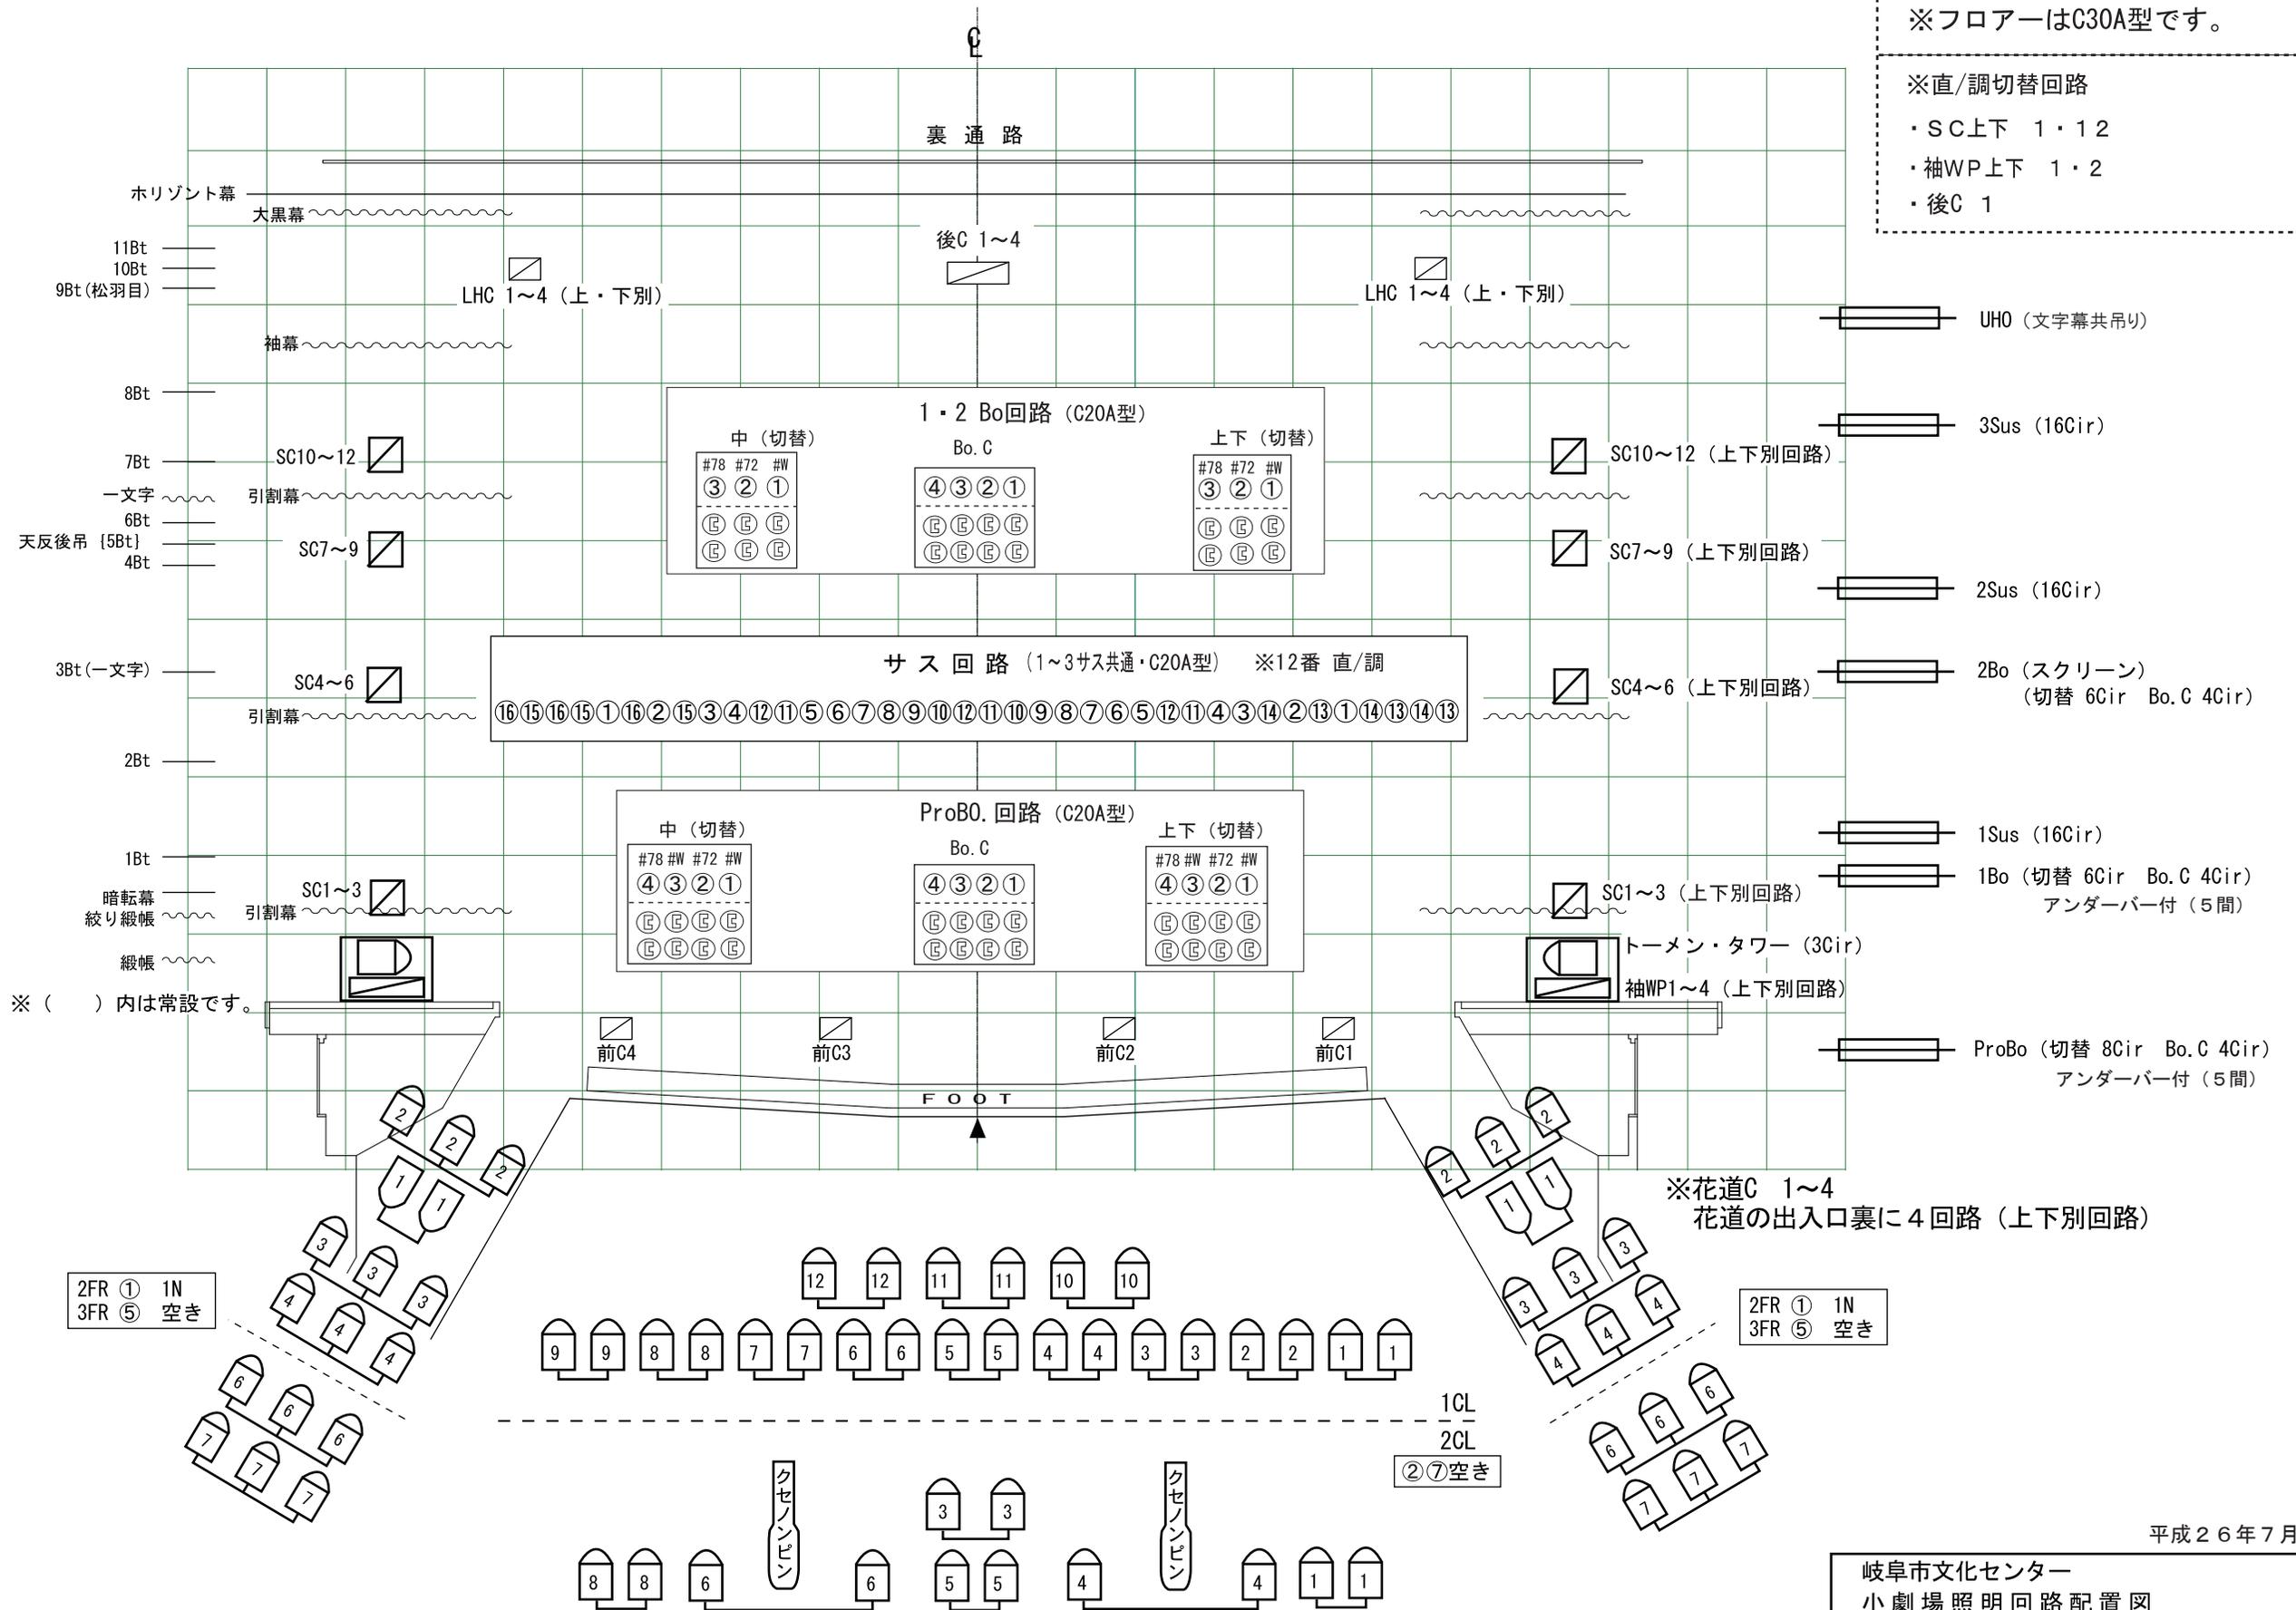

小劇場 舞台袖

